

Weller®




- DE Originalbetriebsanleitung
- EN Translation of the original instructions
- ES Traducción del manual original
- FR Traduction de la notice originale
- IT Traduzione delle istruzioni originali
- PT Tradução do manual original
- NL Vertaling van de oorspronkelijke gebruiksaanwijzing
- SV Översättning av bruksanvisning i original
- DK Oversættelse af den originale brugsanvisning
- FI Alkuperäisten ohjeiden käännös
- GR Μετάφραση του πρωτοτύπου των οδηγιών χρήσης
- TR Orijinal işletme talimatı çevirisi
- CZ Překlad původního návodu k používání
- PL Tłumaczeniem instrukcji oryginalnej
- HU Eredeti használati utasítás fordítása
- SK Preklad pôvodného návodu na použitie
- SL Prevod izvirnih navodil
- EE Algupäraste kasutusjuhendi tõlge
- LV Instrukciju tulkojumam no oriģinālvalodas
- LT Originalios instrukcijos vertimas
- BG превод на оригиналната инструкция
- RO Traducere a instructiunilor originale
- HR Prijevod originalnih uputa
- RU Оригинальное руководство по эксплуатации
- CN 原装使用说明
- KO 오리지널 사용 설명서
- JP 取扱説明書




Zero Smog 4V
Zero Smog 6V
Zero Smog 20T

1

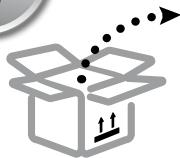


Zero Smog 4V

T0053660699

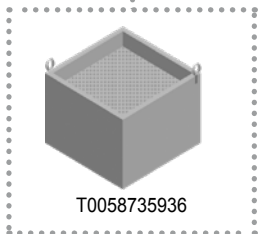


Zero Smog 6V

T0053666699

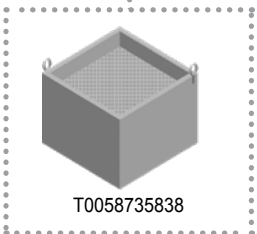



Zero Smog 20T

T0053670699

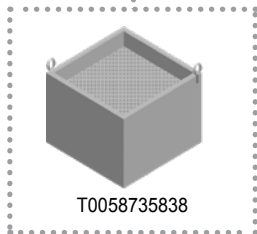

2

Zero Smog 4V, Zero Smog 6V, Zero Smog 20T

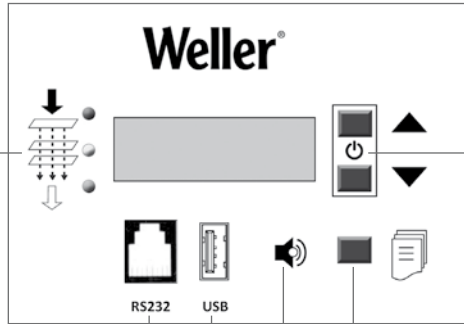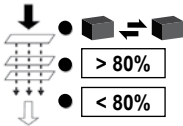

- 1
- 2
- 3
- 4
- 5
- 6

- | | | |
|---|---|--|
| <p>1 DE Rot/Gelb/Grün Filteranzeige
GB Red/yellow/green filter display
ES Indicador del filtro Rojo/Amarillo/Verde
FR Affichage de l'état du filtre rouge/jaune/vert
IT Indicatore del filtro rosso/giallo/verde
PT Indicação de filtro vermelha/amarela/verde
NL Rood/geel/groen-filterindicatie
SV Röd/gul/grön filterdisplay
DK Rød/gul/grøn-filtervisning
FI Punainen/keltainen/vihreäsuodatinnäyttö</p> | <p>GR Ένδειξη φίλτρου Κόκκινη/Κίτρινη/Πράσινη
TR Kırmızı/Sarı/Yeşil filtre göstergesi
CZ Indikace filtru červená/žlutá/zelená
PL Czerwony/żółty/zielony wskaźnik filtra
HU piros/sárga/zöld szűrő kijelző
SK Indikácia filtra červená/žltá/zelená
SL Rdeč/rumen/zelen indikator za filter
EE Punane/kollane/roheline filtri näit
LV Sarkans/dzeltens/zaļš filtra rādījums</p> | <p>LT Raudonas / geltonas / žalias filtro indikatorius
BG Червена/жълта/зелена филтерна индикация
RO Indicator de filtru roșu/galben/verde
HR Crveno/žuto/zeleno pokaznik za filter
RU Красный/желтый/зеленый - индикация степени загрязненности фильтра
CN 红/黄/绿过滤器显示
KO 적색/황색/녹색 필터 표시기
JP 赤/黄/緑 フィルター表示</p> |
|---|---|--|



Read these instructions and the accompanying safety information carefully before starting up the device and starting work with the device.

Keep these instructions in a place that is accessible to all users.

Thank you for the confidence you have shown in buying this device.

The device has been manufactured in accordance with the most rigorous quality standards which ensure that it operates perfectly.

These instructions contain important information which will help you to start up, operate and service the device safely and correctly as well as to eliminate simple faults and malfunctions yourselves.

Always pass on the device to third parties together with these operating instructions.

The device has been manufactured in accordance with state-of-the-art technology and acknowledged regulations concerning safety.

There is nevertheless the risk of personal injury and damage to property if you fail to observe the safety information and the warnings given in these instructions.

Safety information

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

⚠ WARNING! Electrical shock

If the device is faulty, active electrical conductors may be bare or the PE conductor may not be functional.

- Repairs must always be referred to a Weller-trained specialist.
- If the power supply cord is damaged, it must be replaced with a specially prefabricated power supply cord available through the customer service organization.

⚠ WARNING! Danger of injury

The device or parts of the device may fall off during transportation.

- Hold the device by the intended handles only.

⚠ WARNING! Danger of asphyxiation Danger of poisoning

Improper installation can result in above-normal workplace concentrations

- Measure the workplace concentration upon completion of installation work

Inappropriate maintenance cycles for gas media may result in above-normal workplace concentrations

- Specify maintenance cycle

Above-normal contamination levels in the ambient air during cleaning work on the pipe system/extraction area

- If suction capacity is impaired by build-up within the pipe system, replace the contaminated parts

Specified Conditions Of Use

This filtration system is suitable for the extraction and filtration of particles and gases, depending on the filter medium used.

Applied directives

The Weller Zero Smog volume fume extraction system extraction unit corresponds to the EC Declaration of Conformity in accordance with the basic safety requirements of Directives 24/18/EC, 26/95/EC and 211/65/EU (RoHS).

The manufacturer will not be liable for unauthorized modifications to the device.

⚠ WARNING! Danger of asphyxiation Danger of poisoning

Improper use may result in respiratory problems, asphyxiation, poisoning or cancer

- Particles and gases which are unsuitable for the filter medium in use may not be extracted.
- Liquids and flammable gases may not be extracted
- Never use the device without a filter or with a full filter.
- Never use the device without the fan cover

This device may only be used at room temperature and indoors.

Zero Smog 4V, Zero Smog 6V: The unit is designed for use as a surface extraction unit and is not suitable for extracting fumes directly from the soldering gun.

Zero Smog 20T: The unit is designed for extracting fumes directly from the soldering gun and is not suitable for use as a surface extraction unit.

Intended use of the unit also includes the requirement that you

- adhere to these instructions,
- observe all other accompanying documents,
- comply with national accident prevention guidelines applicable at the place of use.

Efficiency test

In accordance with the general guidelines of the trade association, fume extractor systems must be checked regularly, at a minimum annually, in order to ensure that they are fully functional (TRGS 528 BGETF). The efficiency test also serves to check for proper functioning of the Zero Smog 4V / Zero Smog 6V / Zero Smog 2T solder fume extractor systems.

User groups

Due to differing degrees of risk and potential hazards, several work steps may only be performed by trained experts.

Work step	User groups
Installation of complex pipe systems with multiple extractor arms connected	Specialist personnel with technical training
Replacing electrical replacement parts	Electricians
Specification of maintenance intervals	Non-specialists
Installation of complex pipe systems with multiple extractor arms connected Replacing electrical replacement parts	Technical trainees under the guidance and supervision of a trained expert

Technical Data

Solder fume extraction	Zero Smog 4V	Zero Smog 6V	Zero Smog 20T
Dimensions L x W x H	320 x 320 x 395 mm	450 x 450 x 650 mm	450 x 450 x 695 mm
Weight	19 kg	40 kg	45 kg
Mains supply voltage	T0053660699: 230 V / 50 Hz T0053660299: 120 V / 60 Hz	T0053666699: 230 V / 50 Hz T0053666299: 120 V / 60 Hz	T0053670699: 230 V / 50 Hz
Electrical power rating	275 VA	460 VA	530 VA
Fuse	T1, 6A	T3, 15A	T3, 15A
Maximum vacuum	2.700 Pa	2.800 Pa	10.000 Pa
Maximum quantity supplied	230 m³/h	615 m³/h	100 m³/h
Noise emission level	48 dB(A)	51 dB(A)	51 dB(A)
Pre filter Stage 1	pre filter mat class F7		
Combined filter Stage 2; 3	Particle filterH13 + Gas filter (50% Activated carbon + 50 % Potassium Permanganate)		
RS232 port	All system functions can be operated and remotely monitored via the RS232 port.		
USB port	The USB port can be used to load firmware updates, run efficiency tests and log data. Do not leave the USB medium inserted for longer than 2 minutes. After this time expires, the USB module will switch off automatically.		

Menu navigation



ZERO SMOG
VER BL.FW

Display after power-on

- BL = bootloader version
- FW = firmware version

5 sec



OFF MODE

OFF MODE

The turbine and the backlit display are off. To activate/deactivate, press the UP/ DOWN keys simultaneously.

Zero Smog 4V / 6V

Zero Smog 20T

SPEED 100 %
MANUAL/AUTOMATICK

VACUUM 60 %

Default operating mode

Submenu functions

To select a menu item, press the Menu key. Each time the Menu key is pressed, the next menu item is selected. The display automatically returns to the default operating mode after five seconds.



Zero Smog 4V / 6V

The speed (30-100%) can be changed using the UP/DOWN keys.

Zero Smog 20T

The controlled vacuum (60%-100% = approx. 6-1 Pa) is changed using the UP/DOWN buttons.

FILTER TIME 0
CURRENT HOURS

Filter time display

Displays filter time (filter operating hours) elapsed since last Reset.

5 sec

FILTER TIME OFF
DEFAULT

Specified filter time



Specifies the fixed nominal filter life

Adjustable from one

hour to 999 days


- Default setting as-delivered 200 days

- After this time expires, the unit switches to „red“ and an audible signal also sounds

5 sec

FILTER TIME NO
RESET

Menu navigation

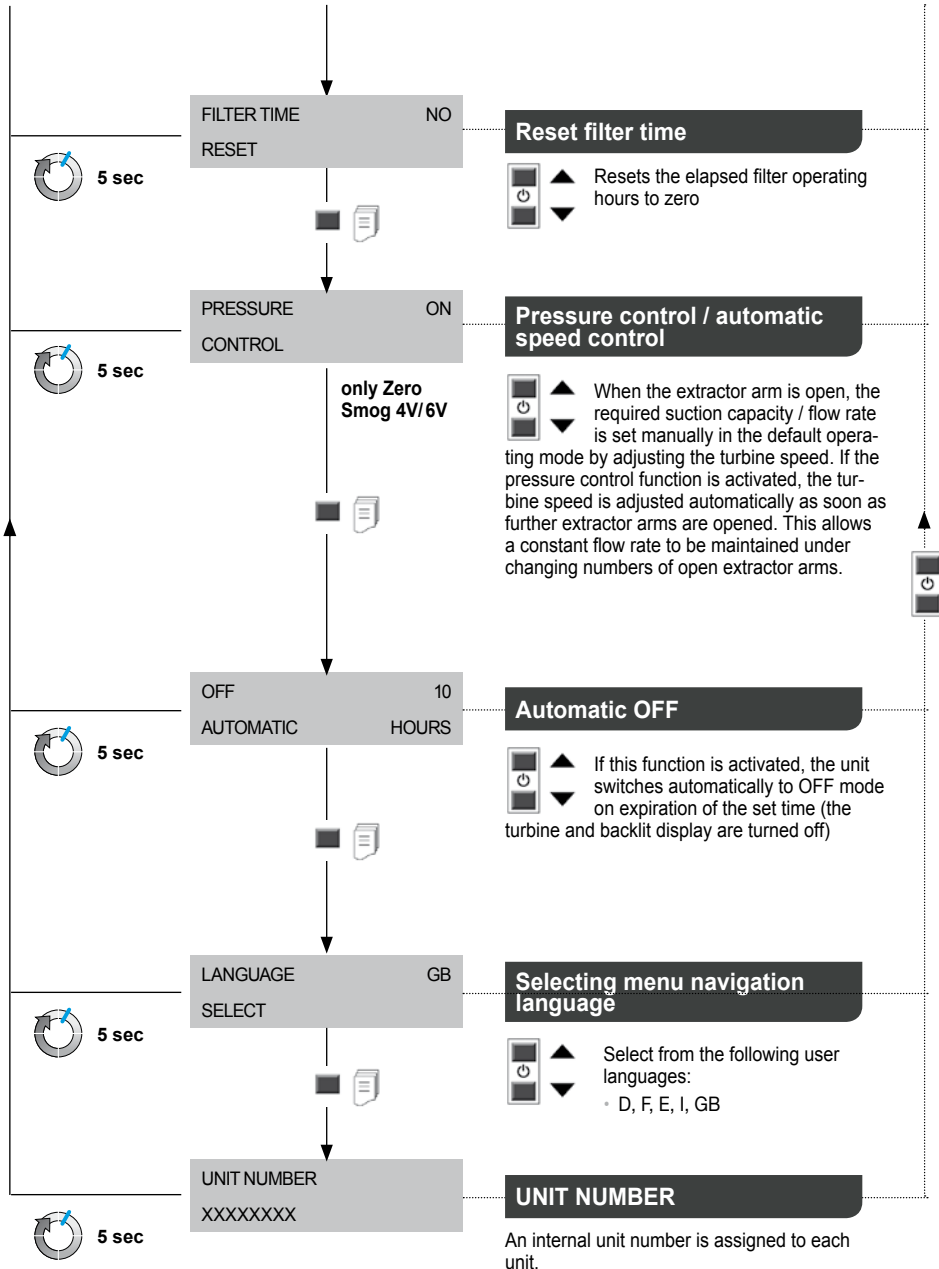

Care and maintenance

Repairs must always be referred to a Weller-trained specialist.



Use original replacement parts only.



Before doing any work on the machine, pull the plug out of the socket.

Contaminated filters must be treated as special waste. Dispose of replaced equipment parts, filters or old devices in accordance with the rules and regulations applicable in your country.

The unit must not be altered or modified in any way!

Notice


Different fluxes and flux constituents and the amount of and size of dust particles in the extracted air will significantly effect the filters working life. A gas filter (without particle filter) must be used for the extraction of adhesive fumes.

To ensure that the filtration system functions properly, the filter must be replaced as follows

- at least once a year orr

- when indicated orr
- if the maximum allowable workplace concentration is exceeded or
- as per maintenance schedule

The degree of clogging of the filter is determined by differential pressure measurement. The filter display indicates the current filter status

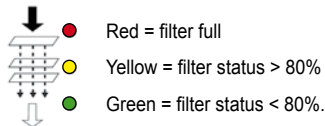

When the filter is used up, an audible signal sounds

- once an hour
- every half hour after 36 hours
- every 10 min after 54 hours
- continuously after 72 hours.

The particle filter and the gas filter are co-ordinated in such a way that they can be replaced together as a compact filter unit. The compact filter must be changed once a year in order to ensure it is fully functional. The fine dust filter (filter mat) is the preliminary stage of the compact filter and therefore must be replaced more frequently. It is may be necessary to replace the prefilter mat even the red LED does not come on after restarting the unit.

Error messages and error clearance

Message/symptom	Possible cause	Remedial measures
• Extraction power missing	• Pipe system leaking	• Reseal the pipe system
	• Filter is dirty	• change the filter
	• Turbine speed too low	• Increase the speed setting
• Loud extraction noises	• Air speed through extractionarm is too high speed	• Reduce the air speed (reduce air quantity)
• Zero Smog is not running	• Thermally switched off	• Leave the Zero Smog to cool down Switch on again after approx. 3 hours
• Filter display is not working	• Minimum pressure hose was not replaced after the filter change	• Reconnect the hose to the filter
• Particle filter depleted too quickly	• Pre-filter has not been used	• Use a pre-filter Fit an F7 filter Use a preliminary separator if the proportion of solid matter is high.n
• Unable to detect USB	• USB inserted too long	• Do not leave USB inserted for longer than 2 minutes. Remove USB and switch unit off and on again
• Reset unit	• Wrong USB medium > 100 mA)	• Remove USB!

Warranty

Claims by the buyer for physical defects are time-barred after a period of one year from delivery to the buyer. This does not apply to claims by the buyer for indemnification in accordance with §§ 478, 479 BGB (German Federal Law Gazette).




 







We shall only be liable for claims arising from a warranty furnished by us if the quality or durability warranty has been furnished by use in writing and using the term „Warranty“.

The warranty shall be void if damage is due to improper use and if the device has been tampered with by unauthorized persons.

Subject to technical alterations and amendments.

For more information please visit www.weller-tools.com

Symbols

	Caution!
	Read the operating instructions!
 	Before performing work of any kind on the unit, always disconnect the power plug from the socket.
	ESD-compatible design and ESD-compatible workstation
 	Disposal Do not dispose of electric tools together with household waste material! In observance of European Directive 2012/19/EU on waste electrical and electronic equipment and its implementation in accordance with national law, electric tools that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility. Dispose of replaced equipment parts, filters or old devices in accordance with the rules and regulations applicable in your country.
 	Disposal- UK Do not dispose of electric tools together with household waste material! In observance of British Directive 2013 No. 3113 on waste electrical and electronic equipment and its implementation in accordance with national law, electric tools that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.
	CE mark of conformity
	British Conformity Mark